

INSTALLATION

ID LRU500i-BD

ID LRU500i-PoE



Note

© Copyright by

FEIG ELECTRONIC GmbH
Industriestraße 1a
D-35781 Weilburg (Germany)
Tel.: +49 6471 3109-0

[https://www.feig.de/en/
identification-support@feig.de](https://www.feig.de/en/identification-support@feig.de)

With the edition of this document, all previous editions become void. Indications made in this manual may be changed without previous notice.

Copying of this document and giving it to others and the use or communication of the contents thereof are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of the grant of a patent or the registration of a utility model or design.

Composition of the information in this document has been done to the best of our knowledge.

FEIG ELECTRONIC GmbH does not guarantee the correctness and completeness of the details given in this manual and may not be held liable for damages ensuing from incorrect or incomplete information. Since, despite all our efforts, errors may not be completely avoided, we are always grateful for your useful tips.

The instructions given in this manual are based on advantageous boundary conditions. FEIG ELECTRONIC GmbH does not give any guarantee promise for perfect function in cross environments and does not give any guarantee for the functionality of the complete system which incorporates the subject of this document.

FEIG ELECTRONIC GmbH calls explicit attention that devices which are subject of this document are not designed with components and testing methods for a level of reliability suitable for use in or in connection with surgical implants or as critical components in any life support systems whose failure to perform can reasonably be expected to cause significant injury to human health. To avoid damage, injury or death the user or application designer must take reasonably prudent steps to protect against system failures.

FEIG ELECTRONIC GmbH assumes no responsibility for the use of any information contained in this document and makes no representation that they are free of patent infringement. FEIG ELECTRONIC GmbH does not convey any license under its patent rights nor the rights of others.

Content

1	Safety Instructions	5
2	Cyber Security	6
2.1	Commissioning of the Device.....	6
2.2	Cyber Security related Firmware Updates	6
2.3	Firmware Downgrade	6
3	Performance Features of ID LRU500i-BD / ID LRU500i-PoE	7
3.1	Performance Features.....	7
3.2	USB Driver	7
3.3	Available Reader Types	7
4	Scope of Delivery	8
4.1	ID LRU500i-BD	8
4.2	ID LRU500i-PoE	8
5	Required Tools	9
6	Installation	10
7	Terminals	14
7.1	ID LRU500i-PoE	14
7.2	ID LRU500i-BD	15
7.3	Antenna Connection.....	16
7.4	Power Supply.....	17
7.4.1	Power Supply via Connector X2.....	17
7.4.2	Power Supply via PoE (Power over Ethernet)	19
7.5	Ethernet Interface on Connector X1 (ID LRU500i-PoE).....	20
7.6	RS485 Interface on Connector X3 (ID LRU500i-BD)	21
7.7	Data-Clock Interface on Connector X3 (ID LRU500i-BD).....	22
7.8	Relay Outputs on Connector X4.....	23
7.9	Digital Outputs on Connector X4 (ID LRU500i-PoE).....	24

7.10	Digital Inputs on Connector X5	25
7.11	USB Mini Interface on Connector X6.....	26
7.11.1	USB Flash Drive service functions.....	26
7.11.2	Reading of Log and Service Data	27
7.11.3	Storing the Reader Configuration on a USB Flash Drive.....	27
7.11.4	Copying the Configuration onto a Reader (Config-Cloning)	29
8	Operating and Display Elements	30
8.1	Status LEDs	30
8.2	Push Button T1.....	31
8.3	DIP Switches S1.....	31
8.4	Buzzer	32
8.5	Reader Power Adjustment	32
9	Technical Data	33
10	Radio Approvals	35
10.1	Declaration of Conformity (CE), (UKCA)	35
10.2	USA (FCC) and Canada (IC)	36
10.2.1	USA (FCC) and Canada (IC) Warning Notices	36
10.2.2	Installation with FCC/IC Approval	36
10.2.3	Label Information.....	38
10.2.4	Antennas Approved in the USA (FCC) and Canada (IC).....	38
Annex A:	Accessories	39

1 Safety Instructions

- ▶ The device may only be used for the intended purpose designed by the manufacturer.
- ▶ The manual must be read thoroughly and kept safe and accessible for all users.
- ▶ Unauthorized changes and the use of spare parts and additional devices which have not been sold or recommended by the manufacturer may cause fire, electric shocks or injuries. Such unauthorized measures shall exclude any liability by the manufacturer.
- ▶ The liability-prescriptions of the manufacturer in the issue valid at the time of purchase are valid for the device. The manufacturer shall not be held legally responsible for inaccuracies, errors, or omissions in the manual or automatically set parameters for a device or for an incorrect application of a device.
- ▶ Repairs may only be executed by the manufacturer.
- ▶ Installation, operation and maintenance procedures should only be carried out by qualified personnel.
- ▶ Use of the device and its installation must be in accordance with national legal requirements and local electrical codes.
- ▶ When working on devices the valid safety regulations must be observed.
- ▶ Prevent children and unauthorized persons from accessing the device.
- ▶ Equipment is intended for use only in restricted access area.
- ▶ Special advice for carriers of cardiac pacemakers:
Although this device doesn't exceed the valid limits for electromagnetic fields you should keep a minimum distance of 25 cm between the device or the antenna and your cardiac pacemaker.

2 Cyber Security

2.1 Commissioning of the Device

IMPORTANT NOTICE

In order to comply with the requirements of the European Radio Equipment Directive (RED) 2014/53/EU article 3 (3), points (d), the following points must be taken into account for the product ID LRU500i-PoE:

- When using the network interface (Ethernet), it may be necessary to create at least one user to enable various functions such as changing the configuration. The user and the password **MUST** be set by the person who puts the device into operation on first use before it is logically connected to a network or by an authorized entity within a network where access is limited to authorized entities.
- When security and/or network assets (keys, certificates, ethernet configuration parameters) are transferred via network interface (Ethernet) TLS encryption must be used to secure the communication.

2.2 Cyber Security related Firmware Updates

IMPORTANT NOTICE

In order to comply with the requirements of the European Radio Equipment Directive (RED) 2014/53/EU article 3 (3), points (d), you are required to register in the FEIG download area under <https://www.feig.de/en/> and subscribe to notifications for cyber security-related firmware and software updates for the product ID LRU500i-PoE.

2.3 Firmware Downgrade

IMPORTANT NOTICE

A firmware downgrade to older major release versions is not possible in order to prevent old major versions with known cyber security vulnerabilities from being executed on the device.

3 Performance Features of ID LRU500i-BD / ID LRU500i-PoE

3.1 Performance Features

With its compact size, its weather-resistant housing, a read range of 8 to 10 m and the circular-polarized antenna supporting any transponder orientation, the UHF Compact Reader ID LRU500i is ideally suited to provide efficient and secure vehicle access control.

The Compact Reader can be easily installed on a VESA mount next to a barrier, gate or bollard due to its mechanical construction. The ID LRU500i can be easily integrated into existing access control systems via the Wiegand or RS485 interface. A version with Power-over-Ethernet (PoE) and USB is also available. To install the compact reader one cable is required for each interface and power supply; for PoE only the network cable is required.

3.2 USB Driver

To ensure proper operation of the reader when using the USB interface, the latest USB drivers must be downloaded from the FEIG homepage.

<https://www.feig.de/en/service/drivers/>

3.3 Available Reader Types

The following readers are available:

Reader Type	Description
ID LRU500i-PoE-EU	Device version with Power-over-Ethernet and USB for Europe
ID LRU500i-PoE-FCC	Device version with Power-over-Ethernet and USB for North America
ID LRU500i-BD-EU	Device version with Wiegand interface, RS485 and USB for Europe
ID LRU500i-BD-FCC	Device version with Wiegand interface, RS485 and USB for North America

Tab.1: available reader types

4 Scope of Delivery

4.1 ID LRU500i-BD

The scope of delivery includes following components:



1 x ID LRU500i-BD



1 x M20 cable gland; cable $\varnothing$ 6–13 mm; for USB



1 x M20 reduction sealing insert; cable $\varnothing$ 4–8 mm



1 x M20 multiple sealing insert for 2 cables; cable $\varnothing$ 2–4 mm



1 x M20 multiple sealing insert for 3 cables; cable $\varnothing$ 2.5–4.5 mm



2 x UHF Windshield Transponder

Tab.2: available components

4.2 ID LRU500i-PoE

The scope of delivery includes following components:



1 x ID LRU500i-PoE



1x M25 slotted reduction sealing insert for 1 cable; cable $\varnothing$ 4–6.5 mm



1 x M20 cable gland; cable $\varnothing$ 6–13 mm; for USB



1 x M20 reduction sealing insert; cable $\varnothing$ 4–8 mm



1 x M20 multiple sealing insert for 2 cables; cable $\varnothing$ 2–4 mm



1 x M20 multiple sealing insert for 4 cables; cable $\varnothing$ 2–4 mm



1 x M16 multiple sealing insert for 2 cables; cable $\varnothing$ 2–4 mm



1 x M25 blind sealing insert



1 x M20 blind sealing insert



1 x M16 blind sealing insert



2 x UHF Windshield Transponder

Tab.3: available components

5 Required Tools

- Slotted screwdriver big
- Slotted screwdriver small
- Hex key size 5

6 Installation

The **ID LRU500i** is designed to be mounted outdoors on a VESA bracket. The reader should be mounted with the connections facing downwards to ensure tightness as shown below. Four holes for M5 screws are provided on the backside of the housing for mounting on the VESA bracket. The screws used should have a screw-in depth of maximum 8 mm. The housing can be opened by means of a hinge. Therefore loosen the screws marked blue and swing away the front part of the reader. During installation, the dimensions of the reader when opened should be taken into account. For secondary protection the reader should be secured by means of an eye bolt. That should be fixed with screw locking varnish, and e.g. a wire rope. The suitable accessory ID ANT.UEB-A can be purchased from FEIG ELECTRONIC.

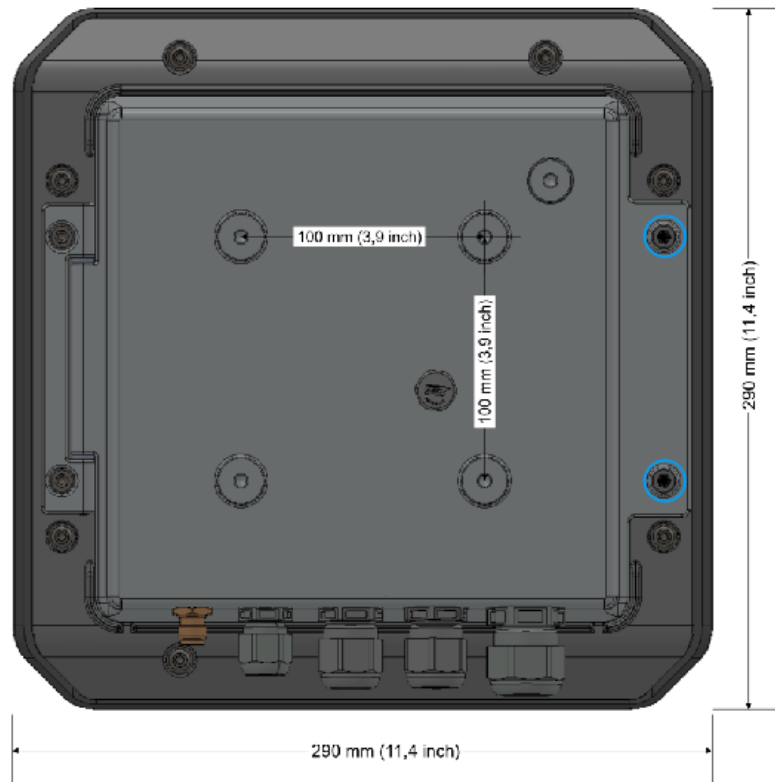


Fig.1: Dimensional drawing – back view

① Notes:

FEIG ELECTRONIC GmbH recommends fastening the screws of the rear cover with a torque of 12Nm.

When mounting on vehicles, it is additionally recommended to use further measures for securing the screws.



Fig.2: Dimensional drawing – side view

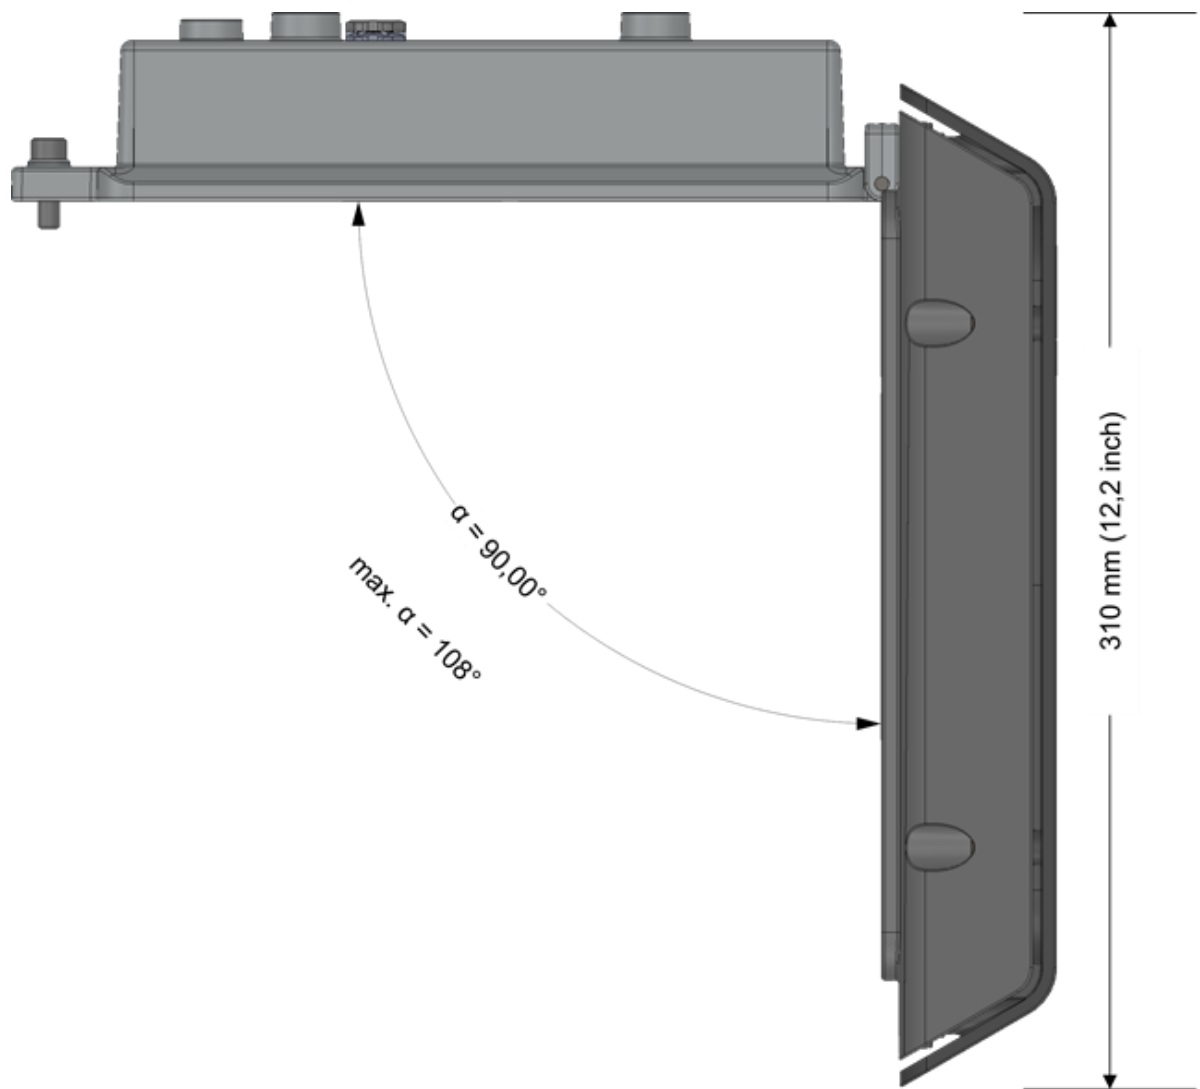


Fig.3: Dimensional drawing – top view: opened housing

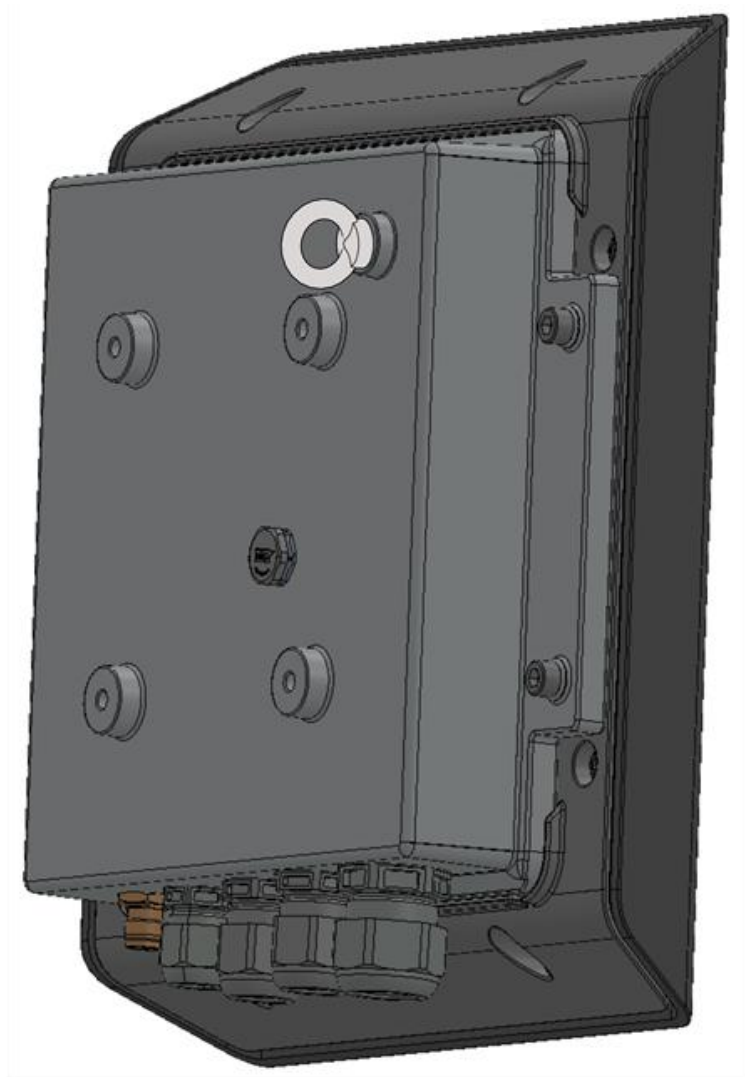


Fig.4: Secondary protection via eye bolt

① **NOTE:**

FEIG ELECTRONIC GmbH strongly recommends to secure the reader against falling by means of an eye bolt to prevent damage.

7 Terminals

7.1 ID LRU500i-PoE

The cable connections are located on the lower side of the reader.

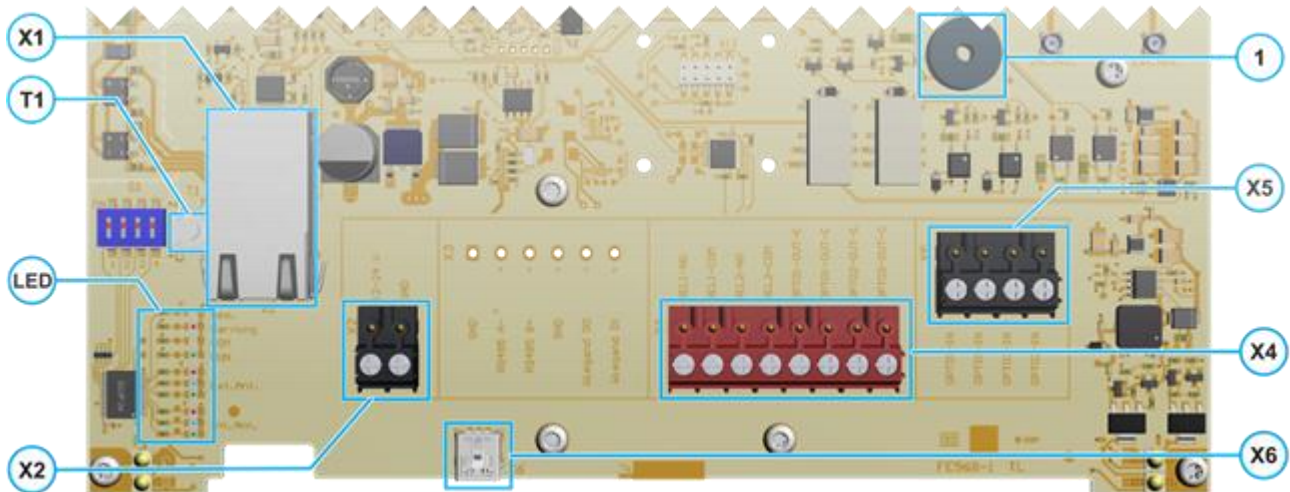


Fig.5: Connection Overview

Connector	Description
X1	10/100 Base-T Ethernet with RJ45
X2	Power Supply 12–24 V DC $\pm 10\%$
X4	2 x Relay Outputs 2 x digital Outputs
X5	Digital Inputs
X6	USB Mini Interface

Tab.4: Connection Terminals

Operating / Display Element	Description
T1	Push Button for configuration reset
S1	DIP switches to set pre-configured options
LED	Status LEDs for service & maintenance
1	Buzzer

Tab.5: Operating and Display Elements

NOTE:

The plug-in terminals can be removed from the PCB to install the cables.

7.2 ID LRU500i-BD

The cable connections are located on the lower side of the reader.

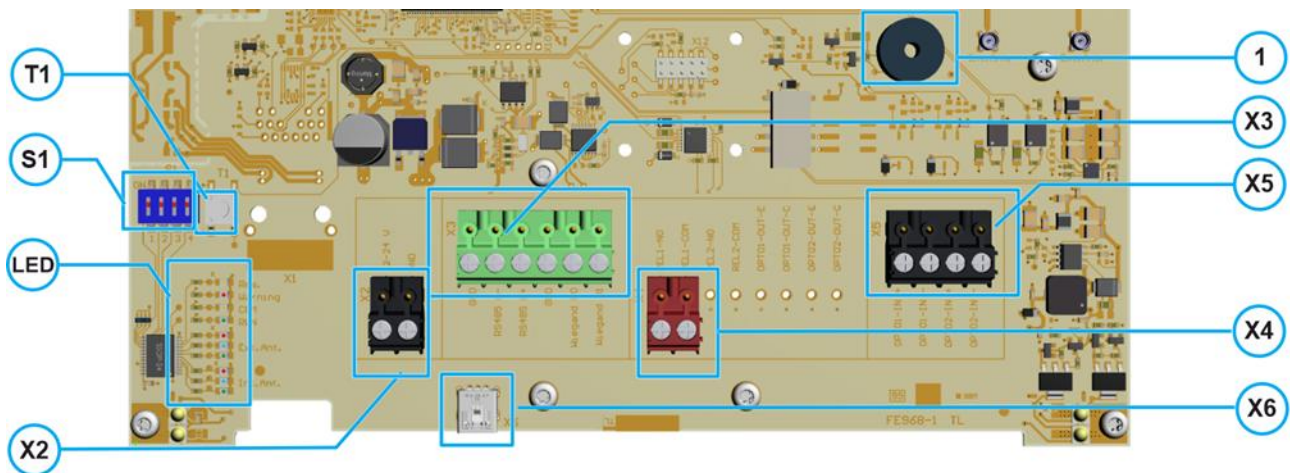


Fig.6: Connection Overview

Connector	Description
X2	Power Supply 12–24 V DC $\pm 10\%$
X3	RS485 & Data/Clock (Wiegand)
X4	1 x Relay Output
X5	Digital Inputs
X6	USB Mini Interface

Tab.6: Connection Terminals

Operating / Display Element	Description
T1	Push Button for configuration reset
S1	DIP switches to set pre-configured options
LED	Status LEDs for service & maintenance
1	Buzzer

Tab.7: Operating and Display Elements

① NOTE:

The plug-in terminals can be removed from the PCB to install the cables.

7.3 Antenna Connection

The TNC socket for connecting the external antenna is located on the lower side of the reader.

The maximum tightening torque for the TNC sockets is 0.69 Nm (6.11 lbf in).

For the power supply of external components, e.g. the UHF antenna multiplexer ID ISC.ANT.UMUX, it is possible to apply the V_{CC} voltage of the reader (24 V DC / max. 500 mA) directly to the antenna cable. The antenna port must be configured accordingly in the reader. This option is not possible when powering the reader via PoE.



Fig.6: External antenna connection

⚠ CAUTION:

- Exceeding the tightening torque will destroy the antenna connection.
- The activation of the supply voltage on the antenna cable can damage the antennas from other manufacturers. It is recommended to use high-resistance UHF antennas. For any further questions please contact the FEIG technical support.

7.4 Power Supply

7.4.1 Power Supply via Connector X2

The supply voltage of 12–24 V DC has to be connected to terminal X2.

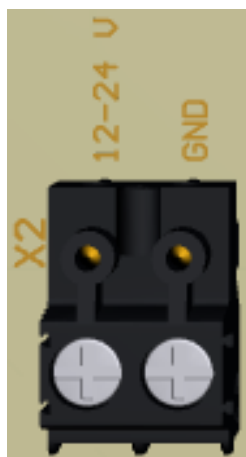


Fig.7: Connector X2 pin assignment for power supply

Abbreviation	Description
12–24 V	Supply voltage 12–24 V DC $\pm 10\%$
GND	Ground

Tab.6: Pin assignment for power supply

Conductor Cross Section	Validation Procedure
from 0,5 mm ² or bigger	IEC 60332-1-2 and IEC 60332-1-3
smaller than 0,5 mm ²	IEC 60332-2-1 and IEC 60332-2-2

Tab.7: Validation procedures for external wiring of the power supply

⚠ CAUTION:

- The reader has to be supplied by a limited power supply according EN 62368-1 Chapter Q.1, or with a NEC Class 2/LPS certified power supply.
- Each reader has to be supplied by a separate external power supply.
- Reversing the polarity of the supply voltage on X2 may destroy the device.
- Never use the external power supply and PoE at the same time!

External wiring for the power supply must fulfil the following norms/validation procedures:

Wire cross section	norms/validation procedures
$\geq 0.5 \text{ mm}^2$	IEC 60332-1-2 und IEC 60332-1-3
$< 0,5 \text{ mm}^2$	IEC 60332-2-1 und IEC 60332-2-2

Tab. 8: Norms and validation procedure


7.4.2 Power Supply via PoE (Power over Ethernet)

Optional the reader (only ID LRU500i-PoE) can be powered via the Ethernet interface on X1 with the use of a PoE „Power over Ethernet“ power supply according to IEEE802.3at*, Class4 (30/25,5Watt). The DC supply can be achieved via the free pins 4, 5 and 7, 8 (Midspan-Power). Also a “Phantom Powering” (Inline-Power) via the signal pins 1, 2, 3 and 6 is possible. Depending on the conductor cross-section the following cable distances can be used:

Conductor Cross Section (CAT5...7)	Max. Cable Length for PoE
0,4 mm ²	~ 30 m
0,6 mm ²	~ 70 m

Tab.8: Max. cable length depending on the conductor cross section

* For detailed technical information regarding the 802.3at standard, please refer to the most recent edition of the corresponding IEEE specification.

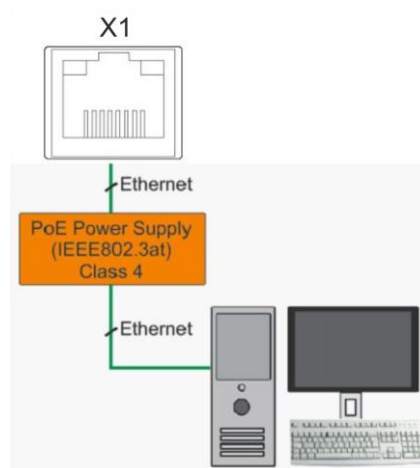

Tab.9: LAN and PoE Connexion

① NOTE:

- It must be ensured that the reader is supplied with 42.5 V (48 V DC – cable losses) at least.
- An operation of an ID LRU500i-PoE via an external power supply and PoE at the same time is not recommended and can cause interferences during operation.
- If the reader is supplied via PoE, no DC voltage can be provided at the connection for the external antenna.

7.5 Ethernet Interface on Connector X1 (ID LRU500i-PoE)

The reader has an integrated 10/100 base-T network port for an RJ-45. Connection is made on X1 and has an automatic “Crossover Detection” according to the 100BASE-T Standard.

With structured cabling STP CAT5 cables should be used. This ensures a reliable operation at 10 Mbps or 100 Mbps. The prerequisite for using TCP/IP protocol is that each device has a unique IP address on the network. All readers have a factory set IP address. The transmission parameters can be configured as required.

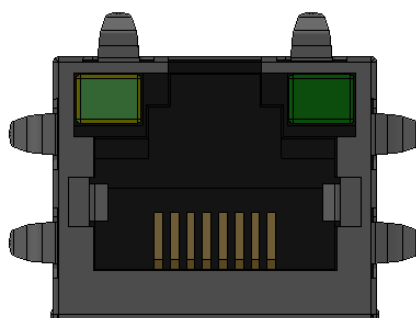


Fig.8: Ethernet connector

Network	Address
IP Address	192.168.10.10
Subnet Mask	255.255.0.0
Port	10001
DHCP	OFF

Tab.10: Standard factory configuration of the Ethernet connection

① NOTE

The reader is equipped with a DHCP ready Ethernet interface.

7.6 RS485 Interface on Connector X3 (ID LRU500i-BD)

The RS485 interface is connected on X3. The transmission parameters can be configured via software protocol.

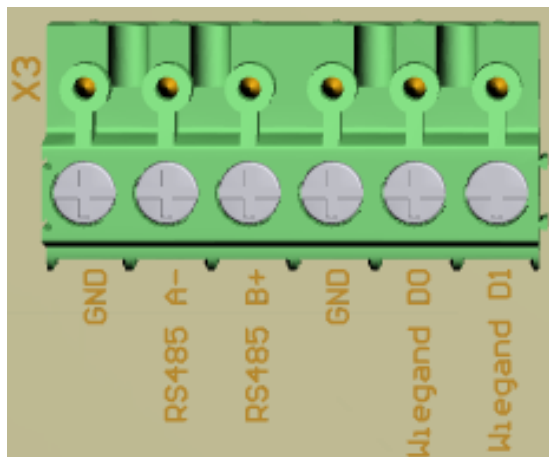


Fig.9: RS485 interface pin assignment on X3

Terminal Assignment X3
RS485 B+
RS485 A-
GND

Tab.11: Pin Assignment X3 (RS485 Interface)

① NOTE:

The RS485 interface is only available in the reader version ID LRU500i-BD.

7.7 Data-Clock Interface on Connector X3 (ID LRU500i-BD)

The data-clock "Wiegand) interface" is connected via terminal X3.

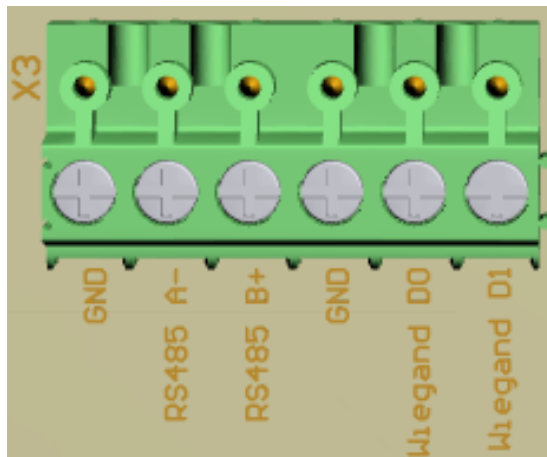


Fig.10: Pin assignment Data-Clock (Wiegand) interface on X3

Terminal Assignment X3
Wiegand D1
Wiegand D0
GND

Tab.12: Pin Assignment Data-Clock "Wiegand Interface"

① NOTE:

- The data-clock interface is only available in Scan Mode in the reader version ID LRU500i-BD.
- The data-clock (Wiegand) interface cannot be used to configure the reader.
- For access control applications it is possible to connect the reader to two inputs of a Wiegand controller in parallel via an ID ISC.LR.WS-A Wiegand Switch and thus monitor two lanes (e.g. entrance and exit) simultaneously.

7.8 Relay Outputs on Connector X4

There are 2 relay outputs (type LRU500i-BD only 1) available at terminal X4 as normally open contacts. With the LRU500i-PoE, each output is fixed with an antenna. Reading a valid transponder on the internal antenna affects the relay REL1, reading a valid transponder on the external antenna affects the relay REL2.

The LRU500i-BD uses only relay output 1!

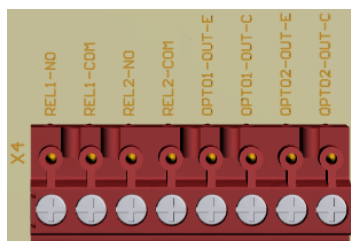


Fig.11: Connector X4 pin assignment for relay outputs

Abbreviation	Description
REL1-NO	Normally open contact relay 1
REL1-COM	Changeover contact relay 1
REL2-NO	Normally open contact relay 2
REL2-COM	Changeover contact relay 2

Tab.13: Pin Assignment Relay Outputs REL1/REL2

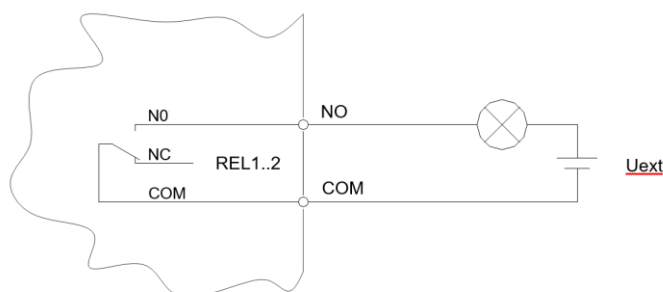


Fig.12: External wiring of the relay outputs

⚠ CAUTION:

- The relay outputs are designed for max. 24 V DC / 2 A continuous load.
- The maximum switching current must not exceed 1 A.
- The relay outputs are intended for switching resistive loads only. In case an inductive load is connected, the relay contacts must be protected by an external protective circuit.

7.9 Digital Outputs on Connector X4 (ID LRU500i-PoE)

There are 2 digital outputs available on terminal X4. The transistor connection, collector and emitter, of the optocoupler output is galvanically isolated from the reader electronic and routed to the outside at terminal X4 without internal additional circuitry. The output must therefore be supplied with an external voltage. Each output is linked fixed with an antenna. Reading of a valid transponder on the internal antenna will affect the digital output OPTO1-OUT, a valid reading on the external antenna will affect the digital output OPTO2-OUT.

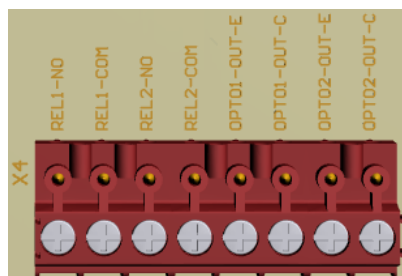


Fig.13: Connector X4 pin assignment for digital outputs

Abbreviation	Description
OPTO1-OUT-C	Digital Output 1 Emitter (-)
OPTO1-OUT-E	Digital Output 1 Collector (+)
OPTO2-OUT-C	Digital Output 2 Emitter (-)
OPTO2-OUT-E	Digital Output 2 Collector (+)

Tab.12: Pin Assignment X4 (Digital Outputs)

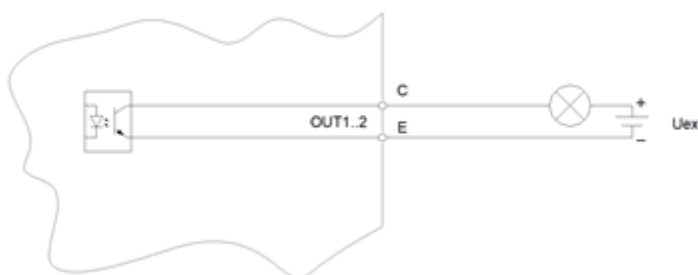


Fig.13: internal and external wiring of the digital outputs

⚠ CAUTION:

- The outputs are designed for an input voltage of 12-24 V DC and an input current of max. 20 mA.
- Polarity reversal or overload of the outputs leads to their destruction!
- The output is only intended for switching resistive loads.

7.10 Digital Inputs on Connector X5

There are 2 digital inputs available on X5. The optocouplers on X5 are galvanically isolated from the reader electronics and must therefore be supplied with an external voltage.

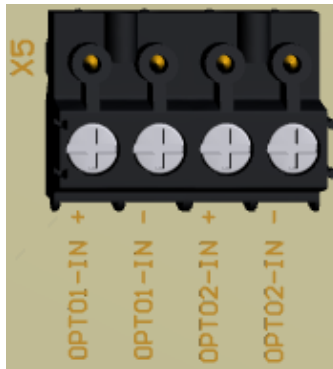


Fig. 2: Connector X5 pin assignment for digital inputs

Abbreviation	Description
OPT01-IN +	Digital input 1 (+)
OPT01-IN -	Digital input 1 (-)
OPT02-IN +	Digital input 2 (+)
OPT02-IN -	Digital input 2 (-)

Table 13: Pin Assignment X5 (digital inputs)

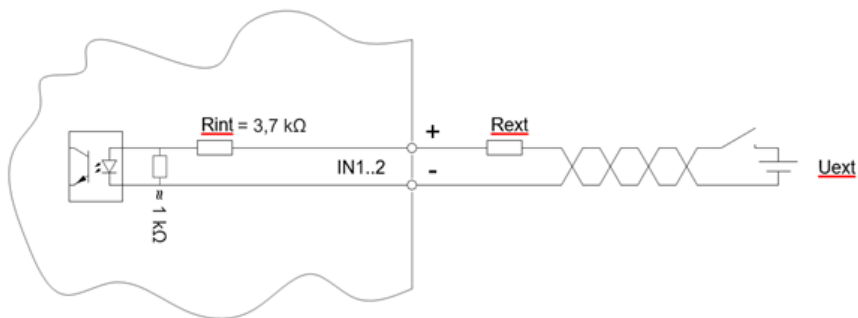


Fig. 14: External wiring of the digital inputs

The external resistor R_{ext} is optional. When wiring the reader, make sure that the input voltage is at least 10.5 V.

⚠ CAUTION:

- The inputs are designed for an input voltage of 12-24 V DC and an input current of max. 20 mA.
- Polarity reversal or overload of the inputs leads to their destruction!

7.11 USB Mini Interface on Connector X6

The reader is equipped with an integrated USB on-the-go interface. This can be used either to connect the reader to a host system or, by means of a special on-the-go adapter cable, for connection of a USB memory stick to the reader. In both cases, the connection is carried out via terminal X6. For this purpose, the blind sealing insert must be removed and can be replaced by the M20 cable gland included in the scope of delivery. Use a slotted screwdriver to unscrew the blind sealing insert.

A standard shielded USB cable can be used to connect the reader to a host system. The data rate of the reader is limited to 12 Mbit (USB full speed).

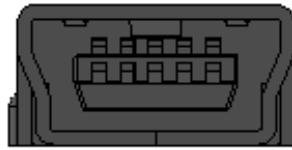


Fig.14: USB Mini interface for host communication

① **NOTE:**

The length of the USB cable must not exceed 5 m (200 inch). It is not allowed to use longer cables.

7.11.1 USB Flash Drive service functions

Via an optionally available USB On-The-Go adapter cable, the interface can be converted to a USB host interface. The adapter cable allows the connection of a USB memory stick to the reader. The USB memory stick can be used to carry out various service functions, such as reading log and service data and uploading a configuration file.



Fig.15: USB On-The-Go adapter

7.11.2 Reading of Log and Service Data

When connecting the USB flash drive during a running operation, the reader will create a subdirectory in the root directory named after the device ID of the connected reader (see label on the back side of the reader) and store device information such as firmware status and IP address in the INFO.LOG file within this directory. If a corresponding file already exists for this reader the file will be updated with the new information and the current date and time.

In addition, the files ACTION.LOG and SERVICE.LOG with further information for service and maintenance for the devices will be generated and stored on the USB flash drive. The function of the CONFIG.INI is described in the following chapter.

After plugging in the USB flash drive the green and red status LEDs will light up permanently. After successful completion of the USB actions the red LED will go out and the green LED will start flashing again. The USB flash drive can be disconnected from the device after the red status LED goes out. In case of an error, the red status LED will start flashing until the USB flash drive is removed.

① **NOTE:**

- After plugging in the USB flash drive the status LEDs of the reader should be observed.
- The USB flash drive may only be disconnected from the reader if the USB actions have been completed!
- The USB on-the-go adapter cable may only be used in conjunction with a USB flash drive. When used for a PC connection the reader may be destroyed or work with strange behavior!

7.11.3 Storing the Reader Configuration on a USB Flash Drive

When connecting the USB flash drive during running operation, the reader will store the readable configuration as an editable and readable CSV file (CONFIG.INI) on the USB flash drive. This file will be stored in the root directory of the USB flash drive for easy copying of the configuration (See "

Copying the Configuration onto a Reader (Config-Cloning)", page 29.). In addition, the same file will be stored in a subdirectory named after the according device ID (see label on the back side of the reader). Thereby it is possible to save the configuration files of several readers e.g. from one system/installation to the same USB flash drive.

All non-locked configuration pages (CFG pages) including the interface parameters of a device will be copied onto the USB flash drive. Password protected configuration pages will not be copied.

After plugging in the USB flash drive the green and red status LEDs will light up permanently. After successful completion of the USB actions the red LED will go out and the green LED will start flashing again. The USB flash drive can be disconnected after the red status LED goes out.

In case of an error the red status LED will start flashing until the USB flash drive is removed.

① **NOTE:**

- If a configuration file CONFIG.IN already exists in the main directory of the USB memory stick, the old file will be overwritten.
- Password-protected configuration pages (see CFG 0) are not written to the USB memory stick. No error message appears.
- After connecting the USB memory stick to the reader, the reader LEDs should be observed.
- The USB memory sticks may only be disconnected from the reader after the USB actions have been completed.

7.11.4 Copying the Configuration onto a Reader (Config-Cloning)

In order to copy the configurations stored in a USB flash drive to a reader, the reader must be switched off before connecting the USB flash drive. After switching on the reader, the reader will search for a USB flash drive during the boot process and copy the configuration from the root directory to its memory.

It must be ensured that no configuration page (CFG page) is password protected in the reader. If configuration pages are password protected, the configuration file will not be copied onto the reader. This also applies if individual configuration parameters contain values out of the permissible range.

After successful completion of the USB actions the red status LED will go out and the green status LED will start flashing again. After the red status LED went out the USB flash drive can be disconnected. In case of an error the red status LED will start flashing until the USB flash drive is removed.

① NOTE:

Connecting a USB flash drive during a running operation of the reader may overwrite an existing configuration file stored on the USB memory stick (See "Storing the Reader Configuration on a USB Flash Drive", page 27.).

8 Operating and Display Elements

8.1 Status LEDs

The status LEDs are located under the push button T1 and the DIP switches S1.

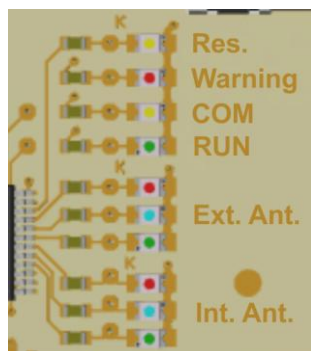


Fig.16: Position of the LEDs on the PCB

Reader status LEDs

Res. (yellow)	Warning (red)	COM (yellow)	RUN (green)	Description
FLASH	-	-	-	While T1 is pushed and hold for 5 s to initiate a reset.
ON	-	-	-	Reader performs a reset (after pushing T1 for 5 s).
-	-	-	FLASH	Reader operates normally.
-	-	FLASH	FLASH	Reader receives a valid protocol from host.
-	ON	-	FLASH	RF Warning [0x84]
-	FLASH (alternating)	-	FLASH (alternating)	Hardware warning; perform Reader Diagnostic [0x6E] for further information.
-	FLASH	FLASH (sequentially)	FLASH	Firmware transfer from host to reader. Do not switch off the reader or disconnect the interface cable during firmware transfer!

Tab.12: Reader status LED overview

Antenna status LEDs

green	blue	red	Description
ON	-	-	UHF power switched on
-	FLASH 1 x	-	Valid transponder detected
-	FLASH 1 x	FLASH 1 x	Invalid transponder detected
-	-	FLASH 1 x	Transponder not supported (e.g. EPC > 96 bits)
-	-	ON	Antenna impedance error (unequal 50 Ω)

Tab.13: Antenna status LED overview

8.2 Push Button T1

By means of the push button T1 a complete configuration reset can be performed. The push button is located between the DIP switches and connector X1 on the circuit board. Fig. X shows the position of the push button. To press the reset button T1 it is necessary to open the housing by means of the hinge after loosening the screws.

To reset the reader back to factory default push the button for at least 5 s until the reset LED below the button is switched on continuously. After releasing the push button the reader performs a restart.

During a complete configuration reset all parameters of the reader will be reset back to factory default and need to be configured again.

8.3 DIP Switches S1

The DIP switches S1 are located left of the push button T1 and the X1 Ethernet connector. They can be used to set pre-defined reader configurations.

DIP 1	DIP 2	DIP 3	DIP 4	Profile	Description
OFF	OFF	OFF	OFF	0	no profile
ON	OFF	OFF	OFF	1	sends Wiegand-26 format for FEIG windshield transponders (for ID LRU500i-BD only)
OFF	ON	OFF	OFF	2	sends Wiegand-26 format for nedap windshield transponders (for ID LRU500i-BD only)
...	...	...	...	3–15	RFU

Tab.14: pre-defined reader configurations via DIP switches

8.4 Buzzer

The buzzer is located above the digital inputs on terminal X5. It is used to notify the service personnel of events during maintenance and service.

8.5 Reader Power Adjustment

In order to achieve high reading ranges, it is necessary to set the reader output power to the highest allowed level. This depends on the reader type used (EU/FCC) and the applicable radio regulations at the installation site. The output power is adjustable in 100 mW steps from 0.1 W to 1 W.

NOTE:

- Both in the EU version and in the FCC version of the reader the output power of the internal antenna must not exceed 0.8 W.
- The admissible max. output power is 2 W e.r.p. for EU versions and 4 W e.i.r.p. for FCC versions. The output power depends on the antenna gain. For calculating the reader output power the Excel file "Calc-RF-Power.xls" is available from FEIG ELECTRONIC GmbH. If a circular polarized antenna is used the antenna gain [dBic] can be reduced by 3 dB. If using a linear polarized antenna the max. antenna gain [dBi] must be used.

9 Technical Data

Mechanical Data

Housing	Plastic (ASA-PC) Aluminum
Dimension (W x H x D)	290 mm x 290 mm x 100 mm (11.4" x 11.4" x 3.9")
Weight	2800 g
Mounting	VESA FDMI MIS-D 100 mm x 100 mm
Protection Class	IP 67
Colour	Anthracite, translucent

Electrical Data

Power Supply	12–24 V DC ($\pm 10\%$), PoE+
Current Consumption	typical 16 W (22 W with PoE+)
Operating Frequency	
• EU Reader	865 MHz to 868 MHz
• FCC Reader	902 MHz to 928 MHz
Output Power	100 mW to max. 1 W configurable in steps of 100 mW
Internal Antenna	
• 3 dB Beam Width:	65° x 65°
• Polarization	circular
• Gain	approx..9 dBic
External Antenna	1 x R-TNC jack (50 Ω) (Reverse-TNC)
RF Diagnostic	RF channel monitoring, Antenna SWR control, Internal Overheating Protection

Outputs ID LRU500i-PoE

• 2 x Optocoupler	max. 24 V DC / 20 mA
• 2 x Relay (LRU500i-BD: 1 x Relay)	max. 24 V DC / 1 A switching current, 2 A permanent current

Output ID LRU500i-BD

• 1 x Relay	max. 24 V DC / 1 A switching current, 2 A permanent current
-------------	---

Inputs

• 2 x Optocoupler	max. 24 V DC / 20 mA
-------------------	----------------------

Interfaces

• Version PoE	Ethernet, USB (OTG)
• Version BD	Wiegand, RS485, USB (OTG)

Protocol Modes

• Version PoE	ISO Host Mode, Notification Mode, Buffered Read Mode
• Version BD	ISO Host Mode, Scan Mode

Functional Properties

Supported Transponder Types	EPC Class 1 Gen 2 EPC Class 1 Gen 2 V2 ISO 18000-6-C ISO 18000-63
-----------------------------	--

Indicators	Signal light with red/green/blue 10 LEDs to indicate operation and antenna state Buzzer
Further Features	Anti-Collision, output of RSSI values and phase angle, battery-assisted Real Time Clock, supports encrypted transponder communication, Secure Key Storage, Config Cloning Function
Environmental Conditions	
Temperature Range	
• Operation	-25 °C to 55 °C
• Storage	-25 °C to 85 °C
Humidity	5 % to 95 % (non-condensing)
Vibration	EN 60068-2-6 10 Hz to 150 Hz: 0,075 mm / 1 g
Shock	EN 60068-2-27 Acceleration: 30 g
Applicable Standards	
Radio Regulation	
• Europe	EN 302 208
• UK	EN 302 208
• USA	FCC 47 CFR Part 15
• Canada	IC RSS-GEN, RSS-210
• India	BIS IS 13252 Part 1
EMC	EN 301 489
Safety	
• Low Voltage	EN 62368
• Human Exposure	EN 50364
Others	RoHS, WEEE

Tab.15: Technical Data

10 Radio Approvals

10.1 Declaration of Conformity (CE), (UKCA)

	Declaration of Conformity (CE) Hereby, FEIG ELECTRONIC GmbH declares that the radio equipment type ID LRU500i is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.feig.de/en/service/eu-declarations-of-conformity/
	UKCA Declaration of Conformity Hereby FEIG ELECTRONIC GmbH declares that the radio equipment type ID LRU500i is in compliance with Directive No. 1206 Radio Equipment Regulations 2017. The full text of the UKCA declaration of conformity is available at the following internet address: https://www.feig.de/en/service/ukca-declarations-of-conformity/

10.2 USA (FCC) and Canada (IC)

10.2.1 USA (FCC) and Canada (IC) Warning Notices

Product name:	ID LRU500i-FCC
FCC ID: IC:	PJMLRU500i 6633A-LRU500i
Notice for USA and Canada	This device complies with Part 15 of the FCC Rules and with ISSED licence-exempt RSS standard(s). Operation is subject to the following two conditions. (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Unauthorized modifications may void the authority granted under Federal communications Commission Rules permitting the operation of this device. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage ; (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Tab.16: Warning Notices

① NOTE:

Changes or modifications made to this equipment not expressly approved by FEIG ELECTRONIC GmbH may void the FCC authorization to operate this equipment.

10.2.2 Installation with FCC/IC Approval

To comply with FCC Part 15 Rules in the United States / IC Radio Standards in Canada, the system must be professionally installed to ensure compliance with the FCC Part 15 certification / IC certification. It is the responsibility of the operator and professional installer to ensure that only certified systems are deployed in the United States / Canada.

The system is intended for industrial and commercial use and requires professional installation. The device and the software required for commissioning and operation are only available from FEIG ELECTRONIC or its distributors.

Installation, commissioning, configuration and operation require qualified knowledge of high-frequency and RFID technology due to its complexity. The connections used are from the industrial sector.

10.2.3 Label Information

The following information must be placed at the outer side of the housing in which the reader is mounted.

Contains FCC ID: PJMLRU500i

Contains IC: 6633A-LRU500i

10.2.4 Antennas Approved in the USA (FCC) and Canada (IC)

This radio transmitter (identify the device by certification number, or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with maximum permission gain and required antenna impedance for each antenna type indicated. Antenna types, not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

The antennas used for this transmitter must be installed to provide a separation distance of at least 23 cm from all persons and must not be located or operating in conjunction with any other antenna or transmitter, except as listed for this product's certification.

Le présent émetteur radio (identifier le dispositif par son numéro de certification ou son numéro de modèle s'il fait partie du matériel de catégorie I) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énoncé ci-dessus et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Les antennes utilisées pour cet émetteur doit être installé pour fournir une distance de séparation d'au moins 23 cm de toutes les personnes et ne doit pas être situé ou opérant en conjonction avec une autre antenne ou un autre émetteur, sauf dans les cas énumérés à la certification de ce produit.

Following antennas are approved by FCC according FCC Part 15 and IC Canada according RS210:

- ID ISC.ANT.U290/290 (8.5 dBic)
- ID ISC.ANR.U580/290 (11.5 dBic)

In order not to exceed the limit value of 4 W EIRP (Effective Isotropic Radiated Power), the cable attenuation must be sufficiently high at 1 W transmission power at the antenna connection, according to the following table:

Antenna	Lin. Gain	Cable Attenuation	Cable Length*
	[dB]	[dB]	[m]
ID ANT.U290/290	6.6	0.6	2
ID ANT.U580/290	9.5	3.5	12

* For cables of the type H155 with an attenuation of 0.3 dB per meter.

Tab.17 Limit value of 4 W EIRP

In general, the required cable attenuation for a given output power P of e.g. 30 dBm, corresponding 1 W, is calculated as follows:

$$\text{Cable Attenuation [dB]} = P \text{ [dB]} - 36 + \text{Lin. Gain [dB]}$$

Annex A: Accessories

For the **ID LRU500i-BD / ID LRU500i-PoE** following optional accessories are available:

Order Number	Article	Description
2557.000.00	ID NET.24V-B	24 V Power Supply Unit; Supply Cable available separately for EU, GB and US (not included)
2558.000.00	ID CAB.NET.24V-B-EU	Power Supply Unit Cable with continental Europe plug
2559.000.000	ID CAB.NET.24V-B-GB	Power Supply Unit Cable with UK plug
2560.000.00	ID CAB.NET.24V-B-US	Power Supply Unit Cable with US plug
5255.000.00	ID MS.VESA100-A Mounting Set	Mast and wall mounting set with VESA100 receptacle for pipe diameters of 1" - 3" (approx. 2.5 cm to 7.6 cm)
5243.001.00	ID ANT.C2-C UHF Antenna Cable R-TNC/TNC 2 m	H155 Coaxial cable for UHF antennas with TNC socket and UHF reader with R-TNC connector Connection type: Connector R-TNC / Connector TNC Length: 2 m
5243.002.00	ID ANT.C6-C UHF Antenna Cable R-TNC/TNC 6 m	H155 Coaxial cable for UHF antennas with TNC socket and UHF reader with R-TNC connector Connection type: Connector R-TNC / Connector TNC Length: 6 m
5335.000.00	ID ANT.C6-x UHF Antenna Extension Cable TNC/TNC 6 m	H155 Coaxial extension cable for UHF antennas with TNC socket Connection type: TNC female / TNC male Length: ca. 6 m
EU: 5236.000.00	ID ANT.U290/290 UHF wide-range antenna 65° circular	Robust UHF antenna for connection to stationary UHF readers Connection: TNC socket
FCC: 5236.000.10		
EU: 5238.000.00	ID ANT.U580/290 UHF wide-range antenna 30° circular	Robust UHF antenna for connection to stationary UHF readers Optimized beam angle, increased antenna gain Connection: TNC socket
FCC: 5238.000.10		
5254.000.00	ID ANT.UEB-A Eye Bolt	M6 eye bolt for fall protection/secondary protection, PU: 10 pieces
4104.000.00	ID CPR.USB/OTG	4 GB USB memory stick with OTG adapter cable (USB mini to USB A)
3271.000.00	ID CTF-U Windshield Transponder	Self-adhesive, passive UHF transponder for mounting in windshield, PU: 10 pieces
3271.000.00	ID CTF-U Windshield Transponder	Self-adhesive, passive UHF transponder for mounting in windshield, PU: 10 pieces
3271.002.00	ID CTF-U Secure Windshield Transponder with Encryption	Passive UHF Transponder for secure Vehicle Identification applications, adhesive for mounting directly on the windscreen, PU: 10 pieces

Tab.18 available accessories